

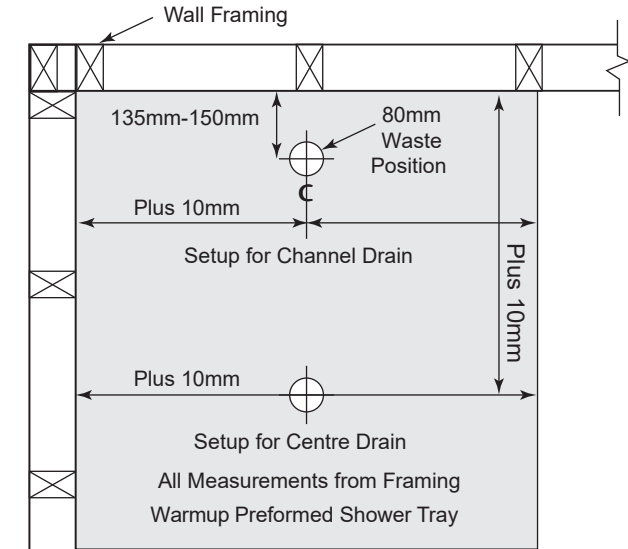


### Setup for Gully Traps Plumber


#### Two Wall

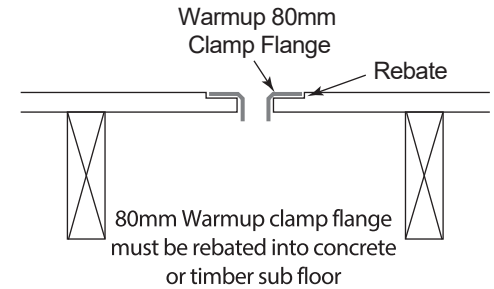


#### Alcove Three Wall

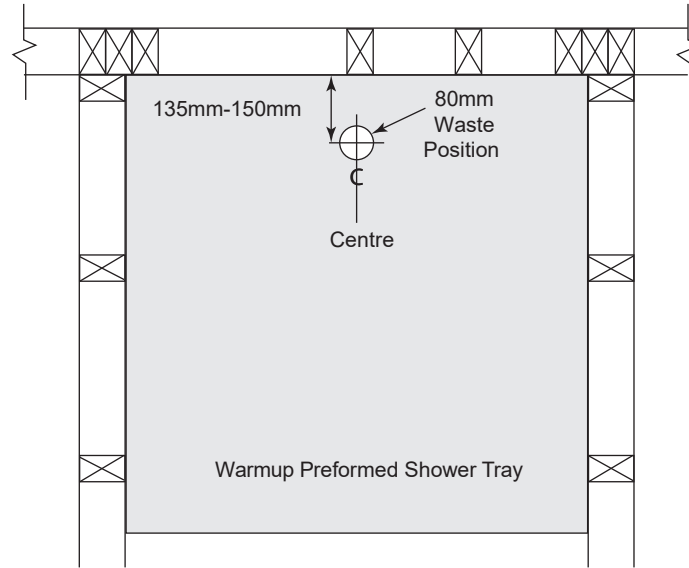

#### Level Entry on Concrete Floors 30-35mm rebate - the size of the shower tray

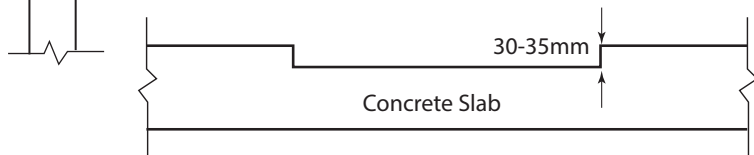

#### Level Entry on Timber Floors Floor cut out to size of shower tray and infilled between the top of floor joists

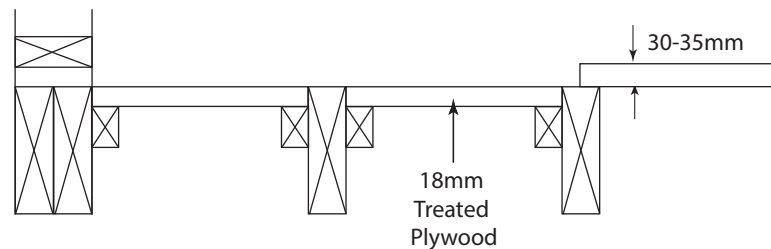

1:2